

# Ubiquiti LiteBeam AC

The LiteBeamAC is a very good, cheap directional router. We use it for most rooftop installs. As with all Ubiquiti gear you need to flash it with the latest firmware first. Often they ship with old beta firmware, and the latest firmware usually gets you faster speeds. [Our config instructions are here.](#)

The AC in the name is not [802.11ac](#), it is Ubiquiti's own protocol. These devices can only connect to other Ubiquiti "AC" devices.

## Ubiquiti LiteBeam 5AC Gen2

Device specs are available at [store.ubnt.com](#).

There are two versions- gen1 and gen2. By default they are on two different sets of channels which causes much confusion. The gen1 cannot use the DFS channels unless you unlock it with a code on the System tab. Once you unlock a gen1 it has the same channels as the gen2. We have the unlock code for "NYC Mesh". Ask us if you need to connect a gen1 to one of our hubs or supernodes.

Gen2 comes with a more sturdy mount (though less range) and also a management 2.4Ghz radio. The new mount has no movement clockwise so the only way to get the level bubble in the middle is with a straight mount! The management radio is very handy as you don't need to know the IP of the device. The management radio is on a timer so it will go off after about 5 minutes.

LiteBeams are very directional so use the built-in alignment tool to get the strongest signal. We like to get better than -65db. Very close to the supernodes you can get -45db.

The default IP over ethernet is <https://192.168.1.20/>

If you connect to the management radio the IP is <https://192.168.172.1/>

Default login:

- name:ubnt
- pwd:ubnt

**[Standard config instructions are here.](#)**

## How to save a LiteBeam via SSH

*These instructions were adapted from a [Ubiquiti Community post](#).*

Sometimes due to a bad configuration change or issue with the connected sector, the LiteBeam signal will be too low to log into the web interface. This can be a big issue especially if the users at the node are unable to locally revert the change. Luckily, SSH can be used to reconfigure the LiteBeam to change any settings to restore proper connectivity to the node, even over a poor connection.

## 1. Connect and log into the LiteBeam

Using your favorite SSH software, log into the LiteBeam using the configured credentials, which will be the same as those used for the web interface. You will then be presented with a standard Linux shell.

## 2. Prepare for the change

Since this shell does not have any nice text editors like `nano`, we will use the `sed` command to replace text in the config file. In this example, we will be changing the SSID `nycmesh-sn1-ev` to `nycmesh-sn1-northeast` and saving the changes. Make sure that the LiteBeam will be able to connect to the new radio! (We will cover this part in the following section.)

This command confirms that the current SSID is what we expect (current SSID goes after the `grep`):

```
# cat /tmp/system.cfg | grep nycmesh-sn1-ev
wireless.1.ssid=nycmesh-sn1-ev
```

If the command does not return anything, that means that the current SSID does not match what you provided after `grep`. Run this line removing everything after the pipe `|` to review the config file before proceeding.

## 3. Edit and save the file

Now we will edit the file by finding and replacing the old SSID with this command (old and new SSIDs go before and after the middle slash `/` respectively):

```
sed -i 's/nycmesh-sn1-ev/nycmesh-sn1-northeast/' /tmp/system.cfg
```

Confirm that you made the change by running this command (new SSID goes after the `grep`):

```
# cat /tmp/system.cfg | grep nycmesh-sn1-northeast
wireless.1.ssid=nycmesh-sn1-northeast
```

Finally, run these two commands to commit the change and reboot the device:

```
save
reboot
```

Wait 2-3 minutes for the device to reboot and rescan for the new radio and you should be good to go.

## How to scan for radios

If you are positive that the LiteBeam can connect to another radio's SSID, you do not need to perform a scan (known in the web interface as a Site Survey). However, it is a good idea to confirm that the signal of the other radio is strong enough to connect to before potentially losing the device.

To perform the scan, follow Step 1 from the previous section to connect to the LiteBeam. Then, run the following command to start the scan:

```
# iwlist ath0 scan
ath0      Scan in progress :
          Cell 01 - Address: 04:18:D6:4C:BB:07
                    ESSID: "ubnt-3P7-N"
                    Mode: Master
                    Frequency: 5.165 GHz (Channel 33)
                    Quality=26/94  Signal level=-70 dBm  Noise level=-90 dBm
                    Encryption key: off
                    Bit Rates: 6 Mb/s; 9 Mb/s; 12 Mb/s; 18 Mb/s; 24 Mb/s
                                36 Mb/s; 48 Mb/s; 54 Mb/s
                    Extra: bcn_int=100
                    Extra: wme_ie=dd180050f2020101810003a4000027a4000042435e0062322f00
                    Extra: ath_ie=dd0900037f01010000ff7f
                    Extra: ieee_mode=802.11n
                    Extra: center1=5165 Mhz
                    Extra: chanbw=20 Mhz
          Cell 02 - Address: E0:63:DA:D4:41:6B
                    ESSID: "nycmesh-sn1-northeast"
                    Mode: Master
                    Frequency: 5.205 GHz (Channel 41)
                    Quality=41/94  Signal level=-55 dBm  Noise level=-90 dBm
                    Encryption key: on
                    Bit Rates: 6 Mb/s; 9 Mb/s; 12 Mb/s; 18 Mb/s; 24 Mb/s
                                36 Mb/s; 48 Mb/s; 54 Mb/s
                    Extra: bcn_int=100
                    Extra: hostname="nycmesh-sn1-northeast"
                    IE: IEEE 802.11i/WPA2 Version 1
```

```
Group Cipher : CCMP
Pairwise Ciphers (1) : CCMP
Authentication Suites (1) : PSK
Extra: wme_ie=dd180050f2020101000003a4000027a4000042435e0062322f00
Extra: ath_ie=dd0900037f01010000ff7f
Extra: airmax_ie=enabled
Extra: airmax_mode=ptmp
Extra: ieee_mode=802.11ac
Extra: center1=5215 Mhz
Extra: chanbw=40 Mhz
```

...

This scan takes about a minute to complete. You may notice the terminal freeze during this time; the LiteBeam switches to another wireless mode while scanning which can sometimes disrupt the connection. As you can see in this example, our target radio with SSID `nycmesh- sn1- nor theast` has a signal level of -55dB which should be more than adequate for us to connect.

---

Revision #6

Created 9 December 2023 04:39:33 by Willard Nilges

Updated 13 July 2024 22:13:27 by James